



BRERA G+F

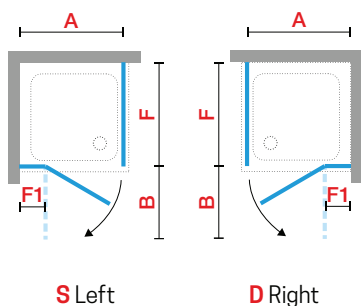


CORNER ENTRY ENCLOSURE, 1 HINGED DOOR + SIDE PANEL

Dimensions					Code	Right	Left	Glass			Profile	
Actual size	Glass centered	Fixed panels	Access	Door projection		D-	S-	1	54	79	B	K
A	G	F1	*	B				Clear	Fumè	Jeans print	Silver	Chrome
DOOR												
67↔69	66↔68	18	46	49	BRERAGF70L	D-	S-					
72↔74	71↔73	23	46	49	BRERAGF75L	D-	S-					
77↔79	76↔78	28	46	49	BRERAGF80L	D-	S-					
82↔84	81↔83	33	46	49	BRERAGF85L	D-	S-					
87↔89	86↔88	23	61	64	BRERAGF90L	D-	S-					
92↔94	91↔93	28	61	64	BRERAGF95L	D-	S-					
97↔99	96↔98	33	61	64	BRERAGF100L	D-	S-					
107↔109	106↔108	43	61	64	BRERAGF110L	D-	S-					
117↔119	116↔118	53	61	64	BRERAGF120L	D-	S-					
127↔129	126↔128	53	71	74	BRERAGF130L	D-	S-					
137↔139	136↔138	63	71	74	BRERAGF140L	D-	S-					
147↔149	146↔148	73	71	74	BRERAGF150L	D-	S-					
157↔159	156↔158	83	71	74	BRERAGF160L	D-	S-					
167↔169	166↔168	93	71	74	BRERAGF170L	D-	S-					
H 170↔220 L 67↔169				SPECIAL	BRERAGFSP	-	-					
SIDE PANEL												
F	G											
67↔69	66↔68	-	-	-	BRERAF70-	-	-					
72↔74	71↔73	-	-	-	BRERAF75-	-	-					
77↔79	76↔78	-	-	-	BRERAF80-	-	-					
82↔84	81↔83	-	-	-	BRERAF85-	-	-					
87↔89	86↔88	-	-	-	BRERAF90-	-	-					
92↔94	91↔93	-	-	-	BRERAF95-	-	-					
97↔99	96↔98	-	-	-	BRERAF100-	-	-					
107↔109	106↔108	-	-	-	BRERAF110-	-	-					
117↔119	116↔118	-	-	-	BRERAF120-	-	-					
H 170↔220 L 20↔119				SPECIAL	BRERAFSP							

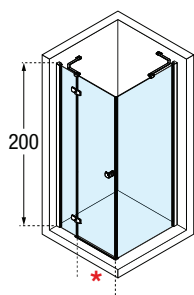


A
Installation
on shower tray

G
Installation
on floor

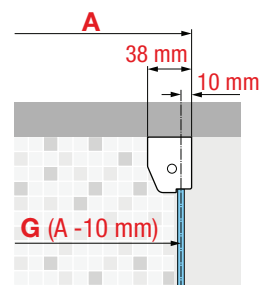





GLASS TYPE

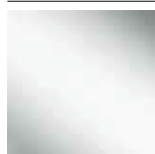

Clear
code 1

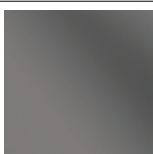

Fumè
code 54

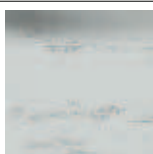

Jeans print.
code 79

PROFILE COLOURS



Silver
code B



Chrome
code K

SUPPORT BAR

STANDARD SUPPORT BAR (INCLUDED)




HANDLES



Chromed metal handle

OPTIONAL

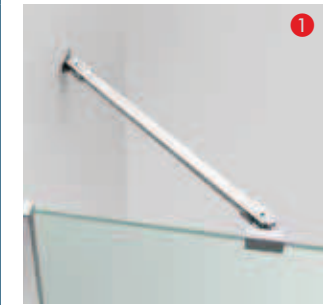


1

SWINGING SUPPORT BAR

- 1 swinging support bar
- 1 wall attachment
- 1 glass clamp

Finishing	Dimen- sions	Code	Price
Silver	100	R80KUOR100-B	
Chrome	100	R80KUOR100-K	
Silver	150	R80KUOR150-B	
Chrome	150	R80KUOR150-K	
Silver	180	R80KUOR180-B	
Chrome	180	R80KUOR180-K	

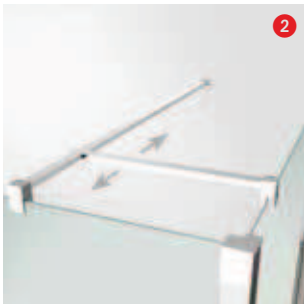

2

KIT 2 BARS "T" COMBINATIONS

- 2 bars of 150 cm sizable
- 1 wall attachment
- 2 glass clamps
- 1 connecting rod

Finishing	Code	Price
Silver	R80KUORT150-B	
Chrome	R80KUORT150-K	



3

EVO FIXING SYSTEM (CORNER)

- 1 front bar of 180 cm
- 1 side bar of 120 cm
- 2 clamps
- 1 angular union

Finishing	Code	Price
Silver	KUADHSF-B	
Chrome	KUADHSF-K	




EVO FIXING SYSTEM (in recess)

- 1 front bar of 180 cms
- 2 clamps


Finishing	Code	Price
Silver	KUADHSFN-B	
Chrome	KUADHSFN-K	

COMBINATION EXAMPLES OF SUPPORT BAR

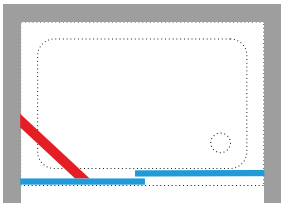


For this combination order:

- 1 Swinging support bar

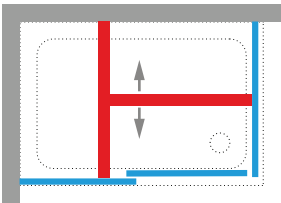


For this combination order:

- Kit 2 bars "T" combination

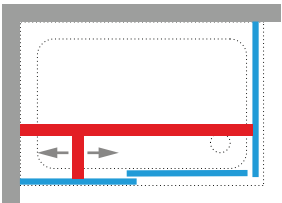

For this combination order:

- Kit bars "T" combination

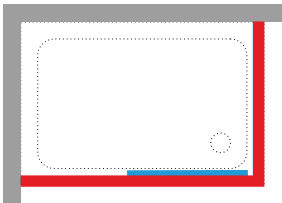


For this combination order:

- Evo fixing system



DATI TECNICI

FINITURE PROFILI

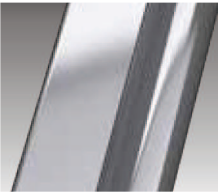

Silver
code B



Chrome
code K



GLASS TYPE 6 mm (European Standards UNI EN 14428)



Clear
code 1




Fumé
code 54

PRINTING



Jeans print.
code 79



OVERALL DIMENSIONS FIXING PROFILES

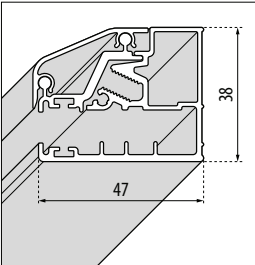


WALL

Feature	Code
Chrome	KP01BREMO-K

HOW TO TAKE THE MEASUREMENTS

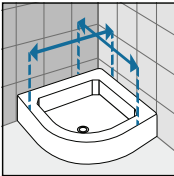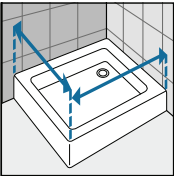

Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

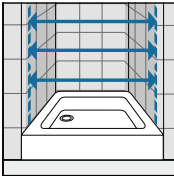

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.