

OPERA 2PH

SHOWER DOOR, 1 SLIDING DOOR + 1 FIXED PANEL IN LINE



200 cm






8 mm



3 cm




Dimensions				Code	Right	Left	Glass		Profile			
Actual size	Glass centered	Fixed panels	Access		D-	S-	1	51	U	B	K	H
A	G	F1	*				Clear	Ravenna print	Matt White	Silver	Chrome	Matt Black
97↔100	95,9↔98,9	51	37	OPE2PH97	D-	S-						
100↔103	98,9↔101,9	52,5	38,5	OPE2PH100	D-	S-						
117↔120	115,9↔118,9	61	47	OPE2PH117	D-	S-						
120↔123	118,9↔121,9	62,5	48,5	OPE2PH120	D-	S-						
137↔140	135,9↔138,9	71	57	OPE2PH137	D-	S-						
140↔143	138,9↔141,9	72,5	58,5	OPE2PH140	D-	S-						
147↔150	145,9↔148,9	76	62	OPE2PH147	D-	S-						
150↔153	148,9↔151,9	77,5	63,5	OPE2PH150	D-	S-						
157↔160	155,9↔158,9	81	67	OPE2PH157	D-	S-						
160↔163	158,9↔161,9	82,5	68,5	OPE2PH160	D-	S-						
167↔170	165,9↔168,9	86	72	OPE2PH167	D-	S-						
170↔173	168,9↔171,9	87,5	73,5	OPE2PH170	D-	S-						
177↔180	175,9↔178,9	91	77	OPE2PH177	D-	S-						
180↔183	178,9↔181,9	92,5	78,5	OPE2PH180	D-	S-						
197↔200	195,9↔198,9	101	87	OPE2PH197	D-	S-						
200↔203	198,9↔201,9	102,5	88,5	OPE2PH200	D-	S-						

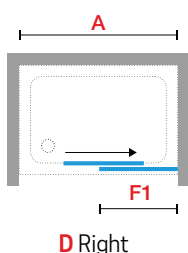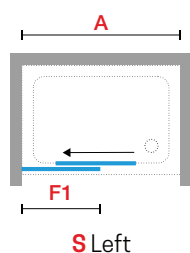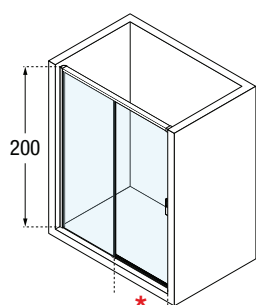

A
Installation
on shower tray

G
Installation
on floor

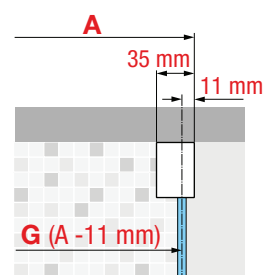


094 Construction of the Code: **Code** + **Left / Right** + **Glass** + **Profile** = Final product Code



GLASS TYPE



Clear
code 1

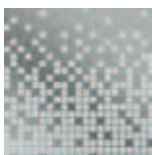

Ravenna Print.
code 51

PROFILE COLOURS



Matt White
code U



Silver
code B



Chrome
code K




Matt Black
code H

TECHNICAL DATA

PROFILE COLOURS



Matt White
code U

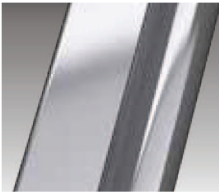

Silver
code B



Chrome
code K



Matt Black
code H


GLASS TYPE 8 mm (European Standards UNI EN 14428)



Clear
cod. 1



PRINTING

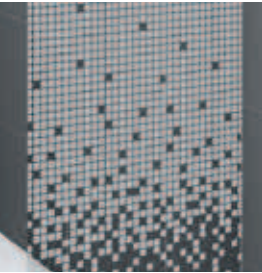


Ravenna
cod. 51

HANDLES




Metal handle white,
black or chrome

OVERALL DIMENSIONS FIXING PROFILES

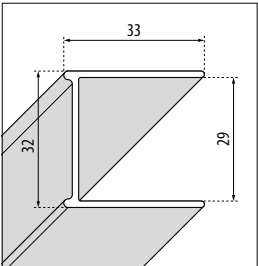

WALL
for Opera PH - 2P - A - 2PH


Height	Profile	Code
1999	White	P01BXMOST-U
	Silver	P01BXMOST-B
	Chrome	P01BXMOST-K
	Black	P01BXMOST-H

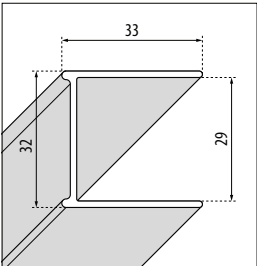


WALL
for Opera FH

Height	Profile	Code
2002	White	P01BXFHST-U
	Silver	P01BXFHST-B
	Chrome	P01BXFHST-K
	Black	P01BXMOST-H

HOW TO TAKE THE MEASUREMENTS

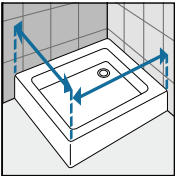

Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

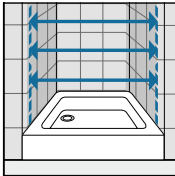

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.