

ROSE ROSSE 3P

SHOWER DOOR, 3 SLIDING PANELS (ACCESS FROM BOTH SIDES)



200 cm



6 mm



6 cm



GLASS TYPE



Clear
code 1



Satin
code 4



Rose 1 Print.
code 56



Rose 2 Print.
code 57

PROFILE COLOURS







Silver
code B




Chrome
code K

Dimensions			Code	Glass				Profile	
Actual size	Glass centered	Access		1	4	56	57	B	K
A	G	*		Clear	Satin	Rose 2 print	Rose 2 print	Silver	Chrome
76↔82	74,6↔80,6	36	ROSE3P76-						
86↔92	84,6↔90,6	34	ROSE3P86-						
96↔102	94,6↔100,6	40	ROSE3P96-						
106↔112	104,6↔110,6	47	ROSE3P106-						
116↔122	114,6↔120,6	54	ROSE3P116-						
126↔132	124,6↔130,6	60	ROSE3P126-						
136↔142	134,6↔140,6	67	ROSE3P136-						
146↔152	144,6↔150,6	73	ROSE3P146-						
156↔162	154,6↔160,6	80	ROSE3P156-						
166↔172	164,6↔170,6	86	ROSE3P166-						
176↔182	174,6↔180,6	93	ROSE3P176-						

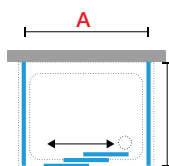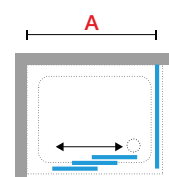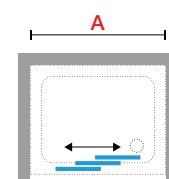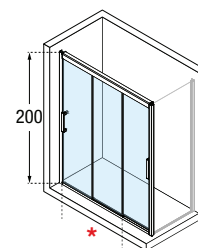

A
Installation
on shower tray

G
Installation
on floor

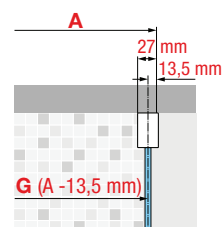

TECHNICAL DATA

PROFILE COLOURS




Silver
code B



Chrome
code K



GLASS TYPE 6 mm (European Standards UNI EN 14428)

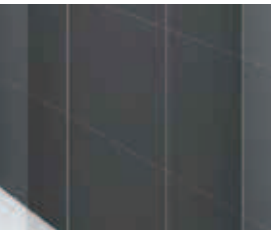

Clear
code 1



Satin
code 4

PRINTING



Rose 1
code 56



Rose 2
code 57

HANDLES



Crystal handle
Interaxis 256 mm



Crystal handle



Chromed metal handle



Chromed metal handle



Chromed metal handle


Code	Price
R40MAROS1-K	

Code	Price
R40MACNF1-K	

Code	Price
R40MANEX1-K	


Code	Price
R40MAGIN1-K	

OVERALL DIMENSIONS FIXING PROFILES

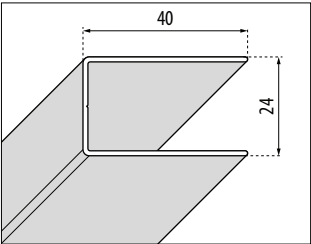


WALL
R - PHB - PH+F - A

Perfis	Code
White	P01BEAST-A
Silver	P01BEAST-B
Chrome	P01BEAST-K

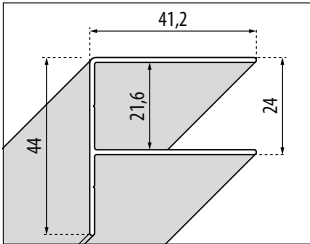


WALL
2A - B - 3P - G - S - 2M - 2P

Perfis	Code
White	P01BEGST-A
Silver	P01BEGST-B
Chrome	P01BEGST-K

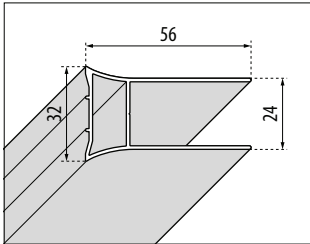

EXTENSION
R - PHB - PH+F - A



Perfis	Code
White	P05ROSST-A
Silver	P05ROSST-B
Chrome	P05ROSST-K

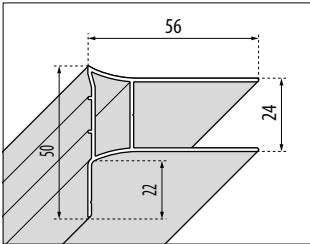


EXTENSION
2A - B - 3P - G - S - 2M - 2P

Perfis	Code
White	P05ROSCST-A
Silver	P05ROSCST-B
Chrome	P05ROSCST-K

HOW TO TAKE THE MEASUREMENTS

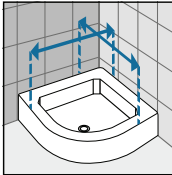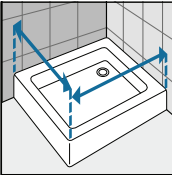

Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

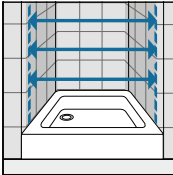

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.